

AVON FUTURE WATCH

QUICK STEP

- BLUETOOTH - PAGE 2**
- ALARM - PAGE 21**
- CALLING - PAGE 37**
- PHONEBOOK - PAGE 32-38**
- PEDOMETER - PAGE 26**
- MUSIC - PAGE 29**
- SLEEP - PAGE 30**

AVON FUTURE WATCH FEATURES

PRODUCT FEATURES

- Touch Screen
- 24hr Alarm
- Call / Scroll / Flip
- Return / Home Button
- Mic USB Charging Port
- Microphone
- Speaker
- Power / Home Button
- Adjustable Silicone Wrist Strap
- Recharge Case

COMPATIBILITY

Please note, some features of your smart watch are only available to specific devices. At the top of each section of the manual, compatibility is shown using the icons below.

Android Only available for Android devices.

iOS Available for Android and Apple devices.

iOS Only available for Apple devices.

BLUETOOTH PAIRING - Android/iOS

Make sure your Avon Future Watch is turned on and fully charged. Make sure Bluetooth is enabled on your smart phone or tablet and your device is discoverable, stay on bluetooth screen.

SETTINGS QR code - Android

On your watch, press "Search new devices" and select your device on the next screen.

Press the "Confirm" button on your watch home to finish the sync process. Your watch should confirm with "Success".

Press the "Confirm" button on your watch home to finish the sync process.

Press the "Confirm" button on your watch home to finish the sync process.

SETTINGS Time/Date - Android/iOS

"Time and date" will allow you to set the time and date.

Press the "Return" key on your watch home to return to the previous page.

SETTINGS Language - Android/iOS

Select "Language" to choose the language shown on your smart watch. The default setting is "English".

Press the "Confirm" button on your watch home to return to the previous page.

SETTINGS Display - Android/iOS

Select "Display" to adjust your preferences for wallpaper and automatic time display mode.

Press the "Confirm" button on your watch home to return to the previous page.

SETTINGS Common Settings - Android/iOS

"Common settings" will allow you to choose your watch screen clock type, enable the motion sensor feature and change the LCD backlight settings.

Press the "Confirm" button on your watch home to return to the previous page.

SETTINGS Restore Settings - Android/iOS

"Restore settings" will allow you to reset all settings on your phone and clear all Bluetooth devices and personal information. It is best to use this feature if you no longer want your watch.

Press the "Confirm" button on your watch home to return to the previous page.

NOTIFIER - Android

Push notifications set on your phone will appear as a short preview on your watch. An incoming message is shown as an example below.

Press the "Return" key on your watch home to return to the previous page.

MESSAGES - Android

When you are reading your notifications, press the "Return" button on your watch home to return to your App menu screen.

Press the "Return" key on your watch home to return to the previous page.

VOLUME - Android/iOS

Press the Volume icon on your home screen to adjust call and music volume.

Press the "Confirm" button on your watch home to return to the previous page.

POWER SAVE - Android/iOS

Power save mode will attempt to power your watch on standby as much as possible to conserve battery life.

Press the "Confirm" button on your watch home to return to the previous page.

RINGTONES - Android

Select a ringtone preset to customize how your watch should alert when receiving your notifications.

Press the "Confirm" button on your watch home to return to the previous page.

ALARM - Android/iOS

Press the Alarm icon on your home screen to set an alarm.

Press the "Confirm" button on your watch home to return to the previous page.

CALENDAR - Android/iOS

Press the Calendar icon on your home screen to access your calendar.

Press the "Confirm" button on your watch home to return to the previous page.

PEDOMETER - Android/iOS

Press the Pedometer icon on your home screen to access your pedometer.

Press the "Confirm" button on your watch home to return to the previous page.

STOPWATCH - Android/iOS

Press the Stopwatch icon on your home screen to start your stopwatch.

Press the "Confirm" button on your watch home to return to the previous page.

BT MUSIC - Android/iOS

Press the BT music icon on your home screen to play music from your smart watch.

Press the "Confirm" button on your watch home to return to the previous page.

CALCULATOR - Android/iOS

Press the Calculator icon on your home screen to access your calculator.

Press the "Confirm" button on your watch home to return to the previous page.

SLEEP MONITOR - Android/iOS

Press the Sleep Monitor icon on your home screen to monitor your sleep.

Press the "Confirm" button on your watch home to return to the previous page.

PHONE BOOK - Android/iOS

Press the Phonebook icon on your home screen to access your phonebook.

Press the "Confirm" button on your watch home to return to the previous page.

CALL LOGS - Android/iOS

Press the Call Logs icon on your home screen to access your call logs.

Press the "Confirm" button on your watch home to return to the previous page.

DIALER - Android/iOS

Press the Dialer icon on your home screen to access your dialer.

Press the "Confirm" button on your watch home to return to the previous page.

CALL LOGS - Android/iOS

Press the Call Logs icon on your home screen to access your call logs.

Press the "Confirm" button on your watch home to return to the previous page.

BT CAMERA - Android

Press the BT camera icon on your home screen to access the remote shutter button.

Press the "Confirm" button on your watch home to return to the previous page.

ANTI-LOST - Android

Press the Anti-Lost icon on your home screen to access your anti-lost features.

Press the "Confirm" button on your watch home to return to the previous page.

ANTI-LOST Looking Phone - Android

Press the "Looking Phone" icon on your watch home to return to your camera preview to take another photo.

Press the "Confirm" button on your watch home to return to the previous page.

ANTI-LOST BT Lost - Android/iOS

Press the "BT Lost" icon on your watch home to set a reminder for when you lose your watch.

Press the "Confirm" button on your watch home to return to the previous page.

SEDENTARY REMINDER - Android/iOS

Press the Sedentary Reminder icon on your home screen to set a reminder for when you are sedentary for too long.

Press the "Confirm" button on your watch home to return to the previous page.

DRINK WATER REMINDER - Android/iOS

Press the Drink Water Reminder icon on your home screen to set a reminder to drink water consistently throughout the day.

Press the "Confirm" button on your watch home to return to the previous page.

RESET - Android/iOS

Press the "Reset" icon on your watch home to return to the previous page.

Press the "Confirm" button on your watch home to return to the previous page.

BATTERY CARE

The lithium battery is built into the device. Do not disassemble the device to remove the battery or attempt to separate it from the device.

Press the "Confirm" button on your watch home to return to the previous page.

SPECIFICATIONS

Bluetooth: Version 3.0
Display: 1.44 inch LCD touch screen (3.61 cm)
Resolution: 128 x 128 pixels
Charging Time: 1.5 to 2 hours
Battery: Built-in 180 mAh Ultra-Lithium Battery
Standby Time: Up to 120 hours
Charging Method: USB
Weight: 42.5g

NOTICE

1. Fully charge before use.
2. Bluetooth will disconnect when it exceeds its distance.
3. The watch is not waterproof. Do not use the watch in water.
4. One Micro USB cable for charging the watch, provided inside the packaging.

Size: W69.7xH113mm

材质: 125g铜板纸, 4C, 双面印刷, 装订成册